

USING YOUR TOASTER

1. Plug the toaster into the outlet.
2. The power button will illuminate. Press the power button to turn the toaster on.
3. Insert bread into the bread slots.
4. Select the toast shade setting using the 1-7 button.
5. Select the toast type using the type button.
6. Select defrost, reheat, or single buttons if desired.
7. Lower the toast lift lever to begin toasting.
8. When toasting is complete, the toast lift level will return to the up position.

NOTE: The toasting process can be stopped at any time by pressing the cancel button. Do not attempt to lift the toast lift lever during the toast cycle.

NOTE: During initial use of this toaster, some slight smoke and/or odor may be detected. This is normal with many heating appliances and will not occur after a few uses.

Toast Shade Setting

The toast shade setting regulates how much the bread is toasted. Shade 1 offers the lightest toast and shade 7 offers the darkest toast. When selecting the toast shade, please remember that dry or thin slices of bread toast faster, so a lower toast shade setting may be appropriate. Thick or moist bread types will require a higher shade setting.

Toast Type Setting

The type setting allows you to select from the 5 different types of toast available.

Defrost

The defrost function allows you to toast any of the five toast type selections straight from the freezer.

Reheat

The reheat button is a quick 30-second toasting cycle to warm up your toasted food.


Single

The single function only heats up the bread slot with the single slice symbol.

Cancel

The cancel button allows you to stop the toast cycle at any point during the process.

GETTING TO KNOW YOUR 4-SLICE TOUCHSCREEN TOASTER

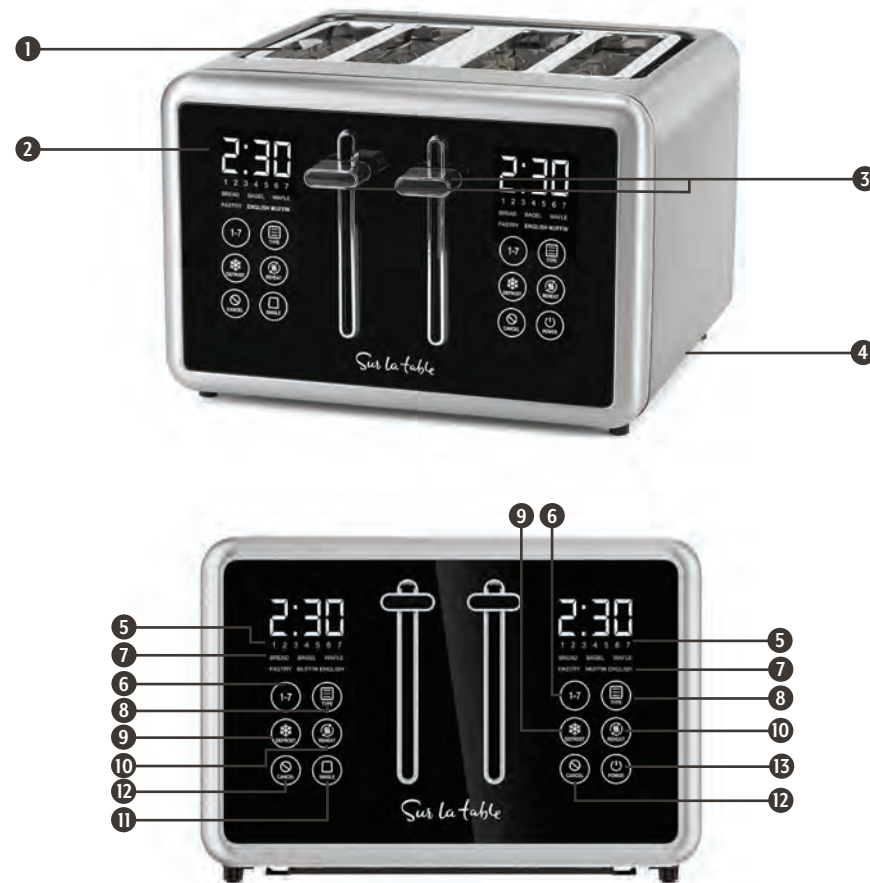

Product may vary slightly from illustration.

- | | |
|----------------------------------|-------------------------------|
| 1 Bread Slots | 8 Toast Type Selection Button |
| 2 Digital Countdown Timer | 9 Defrost Function |
| 3 Toast Lift Lever | 10 Reheat Function |
| 4 Removable Crumb Tray (at rear) | 11 Single Slice Function |
| 5 Toast Shade Selection | 12 Cancel |
| 6 Toast Shade Selection Button | 13 Power |
| 7 Toast Type Options | |

Sur la table

4-SLICE TOUCHSCREEN TOASTER

QUICK START GUIDE



Scan Here to
Learn More!