

Sur la table

DIGITAL KETTLE

WITH **AUTO INFUSER**

USER MANUAL



www.mcappliances.us

SLT-4401 MODEL

BEFORE USE, PLEASE READ AND FOLLOW ALL IMPORTANT SAFEGUARDS, WARNINGS, CAUTIONS AND OPERATING INSTRUCTIONS.



Congratulations! You now own an incredibly versatile, convenient and powerful tea maker.

To get the most out of your tea maker, please read the manual carefully before use, and keep this manual for easy reference. **Enjoy!**

Sur la table

*This manual is only applicable to SLT 4401. All the contents in the manual are for reference only during the user's use and maintenance. The pictures are for reference only.

*All the contents in the manual have been carefully checked. If there are any printing errors or misunderstandings in the contents, the company reserves the right to interpret.

IMPORTANT SAFEGUARDS

1. Read all instructions.
2. Do not touch hot surfaces. Use handle.
3. Do not let the power cord hang over edge of table or counter, or touch hot surfaces.
4. Always place tea kettle and power base on a flat, sturdy surface away from hot gas or electric burners, or in a heated oven.
5. Beware, scalding may occur if the lid is removed during the heating cycle.
6. DO NOT immerse cord plug, power base, or kettle in water or other liquids.
7. Do not operate any appliance with a damaged cord or plug, or if it has malfunctioned in any manner.
8. Close supervision is necessary when appliance is used by or near children.
9. Do not use accessories other than the ones that come with this tea kettle to avoid the risk of fire or electric shock.
10. Use indoors only.
11. Do not use appliance for other than the intended use.
12. Do not attempt to repair item. Repairs should be done by authorized service personnel only.
13. Do not overfill kettle, as boiling water may spill out.
14. Unplug the kettle from the outlet when not in use and before cleaning.
15. Extreme caution must be used when moving an appliance containing hot water.
16. This appliance is not intended for use by children or by persons with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge. Close supervision is necessary when any appliance is used near children. Children should be supervised to ensure that they do not play with the appliance. Keep the appliance and its cord out of reach of children.

SAVE THESE INSTRUCTIONS HOUSEHOLD USE ONLY

Power Supply

- The Digital Kettle must use a standard socket, and before use, confirm that the voltage frequency is consistent with the voltage frequency on the product label.
- Do not use with voltages other than AC 120V~ to avoid fire or electric shock. Do not use the power cord or plug if damaged or frayed.
- Do not touch or unplug the power plug with wet hands, as this may cause electric shock.
- Do not forcibly bend the power cord, bundle it or place it close to any other heating devices as this may cause damage to the power cord, fire or electric shock.
- Please check the socket, power cord and power cord plug before usage. If found that the socket hole is loose or the power cord or power plug is damaged, do not use.
- When the product is not in use for an extended period of time, please be sure to unplug the power cord to prevent damage to the product.


Dangerous Matters

- Avoid actions that may cause damage to the power cord and power cord plug, such as immersing the power cord or plug in water, placing the power cord near other heating devices, forcibly bending, twisting, stretching, pressing, or bundling the power cord. A damaged plug or cord may cause dangerous accidents such as short circuit, electric shock and/or fire.
- Do not use this product for purposes other than those stated in the product manual, such as drying items, etc., as this may cause a fire.
- If any smoke appears, unplug the power plug. Immediately stop the operation of the product and cut off the main power supply in the house if necessary.

WHAT'S IN THE BOX



GETTING TO KNOW YOUR DIGITAL KETTLE

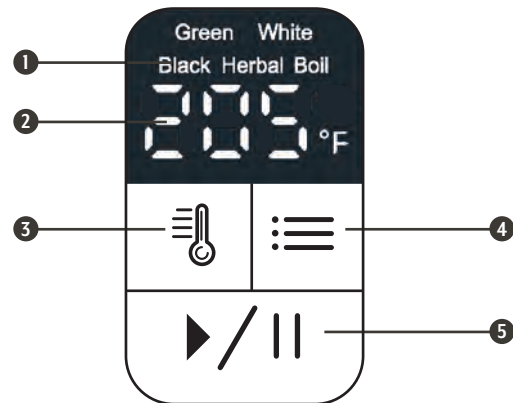

Product may vary slightly from illustration.

- 1 Strength Display
- 2 Temp Display
- 3 Temp Button
- 4 Strength Button
- 5 Start Button

Seven temperature options: 158°F, 167°F, 176°F, 185°F, 194°F, 203°F, 212°F.
Rating: 120V / 60Hz / 1500W



PRODUCT ASSEMBLY METHOD



OPERATION METHOD



SETTING UP KETTLE

1. Place the power base and kettle on a flat, sturdy surface.
2. Carefully, remove all packaging.
3. Place the kettle on the power base.
4. Plug the power base to a power source.
5. Press the start/pause button.
NOTE: A buzzing noise will sound as the infuser is rising.
6. Remove the kettle from the power base and carefully rinse it and the infuser basket. Do not submerge the kettle under water or any other liquid.
7. Dry the kettle and infuser basket with a soft cloth.
8. Enjoy!

Strength and tea soaking time table is as below:

TEA STRENGTH SOAKING TIME							
	158°F	167°F	176°F	185°F	194°F	203°F	212°F
Strong	6min	5min	4min	4min	4min	4min	3min
Medium	5min	4min	3min	3min	3min	2min	2min
Mild	4min	3min	2min	2min	2min	1min	1min
Custom	0-10min	0-10min	0-10min	0-10min	0-10min	0-10min	0-10min

TEMPERATURE AND TIME FOR MODES			
	TEMPERATURE	TIME	KEEP WARM TEMPERATURE
Green	175°F	3min	165°F
White	185°F	3min	165°F
Black	212°F	2min	175°F
Herbal	205°F	4min	175°F
Other Temperature	158°F to 175°F	1-10min	155°F
	185°F	1-10min	165°F
	195°F to 212°F	1-10min	175°F

USING KETTLE

1. Place the power base on a flat, sturdy surface.
2. Fill the kettle with the desired amount of water. Do not exceed the Max markings.
3. Place the kettle on the power base.
4. Fill infuser with tea and cover it with the infuser lid.
5. Carefully place the infuser on the tube inside the kettle.
6. Place the kettle lid on.
7. Plug kettle into the power source.
8. Select desired brewing option.

A. If you would like to use a preset tea settings:

1. Press the menu option (☰) to toggle between the different tea options
2. Once the tea option you desire is on the display, select the start/pause button (▶/||) to start the brewing process.
 - The display will show the temperature rising to the ideal temperature for the tea selected.
 - Once the optimal temperature is reached, the infuser will plunge into the water. **Note:** a buzzing noise is normal as the diffuser plunges.
 - Once the infuser is submerged in the water, the display will countdown the minutes the infuser will be submerged in the water.
 - Once the time is up, the infuser will automatically rise, the kettle will beep, and your tea will be ready!
 - The keep warm feature will remain on for 60 min .

B. If you would like to customize your time and temperature:

1. Press the temperature button (🌡️) to toggle between the 7 different temperature settings.
2. Once the temperature you desire is on the display, press the start pause button (▶/||).
3. Next, press the temperature button (🌡️) to select the number of minutes you would like the infuser to be submerged for.
4. Then, press the start button (▶/||) to begin brewing process.
 - The display will show the temperature rising to the ideal temperature for the tea selected.
 - Once the optimal temperature is reached, the infuser will plunge into the water. **Note:** a buzzing noise is normal as the diffuser plugs.
 - Once the infuser is submerged in the water, the display will countdown the minutes the infuser will be submerged in the water.
 - Once the time is up, the infuser will automatically rise, the kettle will beep, and your tea will be ready!
 - The keep warm feature will remain on for 60 min.

Note: Kettle will enter sleep mode if no operation occurs within 20 seconds.

KEEP WARM

Keep warm feature will automatically turn on after the brew cycle is complete and remain on for 60 minutes.

TEMPERATURE DISPLAY PREFERENCE

To switch between Celsius and Fahrenheit, press the temperature (🌡️) and menu (☰) buttons at the same time.

TROUBLE SHOOTING

Malfunction	Cause	Solution
The unit does not work	The unit is not plugged in	Check if the unit is plugged in
	Overheating protection due to high temperature	Let the unit rest for a few minutes before turning it on normally
	Thermostat or heating element is damaged	Contact customer service.
Tea basket can not move up and down	Air pump is damaged	Contact customer service.
Control buttons or knobs are inoperable	Circuit board failure	Contact customer service.
The unit has normal displaying but no heating function.	The dry burning temperature of the heating plate exceeds 230°F	Please unplug the unit , remove the kettle from power base, pour an appropriate amount of cold water into the kettle, and let it cool for 30 minutes.
Display code E1	/	Contact customer service.

1 YEAR LIMITED WARRANTY

Customer Service:

(877) 246-0990

ApplianceSupport@monchateau.us

Sur la table

DIGITAL KETTLE

WITH **AUTO INFUSER**

Customer Service:

(877) 246-0990

ApplianceSupport@monchateau.us

MODEL: SLT-4401