

Sur la table
KITCHEN ESSENTIALS

AIR FRYER TOASTER OVEN

23 QT 0.78 CU FT

OWNER'S MANUAL



www.mcappliances.us
MODEL SE-1821

BEFORE USE, PLEASE READ AND FOLLOW ALL IMPORTANT
SAFEGUARDS, WARNINGS, CAUTIONS AND OPERATING INSTRUCTIONS.



Sur la table
KITCHEN ESSENTIALS



Congratulations! You now own a Toaster Oven Air Fryer, the ultimate kitchen companion. This versatile appliance brings convenience and functionality to your countertop.

Toast your favorites, bake with precision, broil to perfection, and keep your food warm.

Indulge in crispy dishes without the extra calories.

The compact design fits any kitchen

Don't forget to read the manual for easy reference.

Elevate your cooking experience and delight your taste buds with the Toaster Oven Air Fryer's endless possibilities.

Get ready to create culinary wonders effortlessly. Enjoy the journey of deliciousness that awaits you!

Please read the manual carefully before use and keep this manual for easy reference. **Enjoy!**

Sur la table

KITCHEN ESSENTIALS

© 2023 Sur La Table. All Rights Reserved.

Products mentioned herein are for identification purposes only and may be registered trademarks of their respective companies. All brand names, trademarks or registered trademarks are the property of their respective owners.

This manual is only applicable to SE-1821. All the contents in this manual are for reference only during the user's use and maintenance. The pictures are for reference only. All the contents in the manual have been carefully checked. If there are any printing errors or misunderstandings in the contents, the company reserves the right to interpret.

TABLE OF CONTENTS

WHAT 'S IN THE BOX	6
CONTROL PANEL	7
BEFORE THE FIRST USE	8
OPERATION	9
TOAST	10
BROIL	10-11
PIZZA	11
WARM	12
ROAST	12-13
BAKE	13
USEFUL TIPS	14
SAFETY	15
ERROR CODES	15
WARRANTY	15



WHAT 'S IN THE BOX

1 Oven




2 Crumb Tray



3 Baking Tray



5 Air Fryer Basket

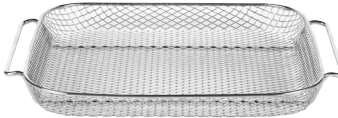

4 Oven Rack




TRAYS OR BASKET POSITION SLOTS



TEMPERATURE KNOB: Rotate the Temperature knob clockwise to select your desired temperature, which must be no lower than **200 F**, with a maximum temperature of **450 F**.

MODE KNOB: This knob is used to set the operation status of the heating element.

CONTROL PANEL

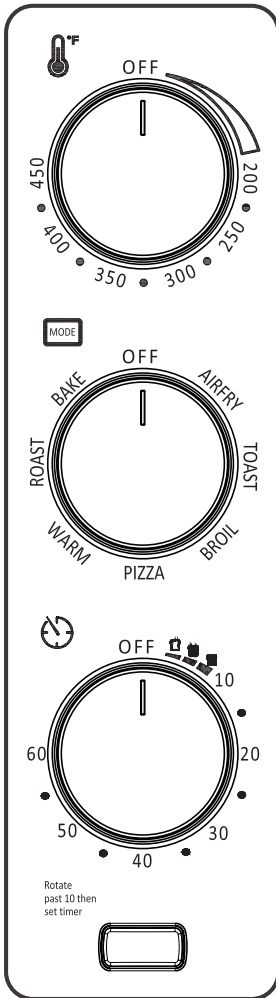

- **AIRFRY:** Both the upper and lower heating elements, as well as the fan, will be in operation.
- **TOAST:** Both the upper and lower heating elements will be on during operation.
- **BROIL:** Only the upper heating element will be on during operation.
- **PIZZA:** Both the upper and lower heating elements, as well as the fan, will be on during operation.
- **WARM:** Only the lower heating element will be on during operation.
- **ROAST:** Both the upper and lower heating elements, as well as the fan, will be on during operation.
- **BAKE:** Both the upper and lower heating elements, as well as the fan, will be on during operation.
- **TIMER CONTROL:** Rotate the Timer knob to set the operating time, with a maximum operating time of 60 minutes. The range from “OFF” to “10” indicates the desired level of browning, from light to dark, when toasting sliced bread. If the Timer knob reaches the “OFF” position, the toasting process will stop and the Indicator will turn off.*

*Turn the Timer Control to OFF to turn the Air Fryer Toaster Oven OFF.

During the initial **start-up** operation, you may experience a minimal smell and smoke for approximately **15 minutes**. This is normal and caused by the protective substance on the heating elements, which safeguards them during shipping from the factory. It is recommended to operate the oven without any food for about **15 minutes** during the first use. Also, ensure proper ventilation in the room.

The inner cavity wall has three different heights of rack guides (slots).

Depending on the status of the heating element and the **size of the food**, you can place the oven rack at different heights to achieve optimal **toasting performance**. If only the upper heating element is energized, it is suggested to place the oven rack on the upper slot, ensuring **at least a 30mm distance between** the top of the food and the top heating element.

When setting the Timer knob for less than 10 minutes, always rotate the Timer knob to over 10 minutes first, and then rotate it back to your desired time. This ensures a safe and accurate setting.

Always monitor the food while it's operating to prevent overcooking.

CAUTION: When removing food from the oven, always use oven mitts to reduce the risk of burns



OPERATION

AIRFRY:

For the “**AIR FRY**” function, both the **upper and lower heating** elements, as well as the fan, will be energized during operation. This setting is suitable for air-frying frozen **French fries, and other similar foods**.

Plug in the appliance and rotate the **Temperature knob** to the desired temperature. Set the **Mode knob** to the “**AIR FRY**” position.

NOTE

The selected temperature must be no lower than **200 F**.

Add the appropriate amount of frozen French fries into the frying basket. Open the oven door and position the frying basket securely. Close the oven door.

Turn the **Timer knob** to select the desired cooking time. When the time is set, the indicator will illuminate, and the appliance will start working.

Once the cooking cycle is complete, the **Timer knob** will return to the “**OFF**” position, and the appliance and indicator will automatically turn off.

You can stop the cycle at any time by turning the Timer knob to the “**OFF**” position.

Remove the frying basket using oven mitts.

CAUTION: Be cautious as the frying basket may be very hot.
Use oven mitts to handle it and avoid touching hot parts.

TOAST

For the **“TOAST”** function, both the upper and lower heating elements will be energized during operation. This setting is suitable for toasting bread and similar foods.

Plug in the appliance and rotate the Temperature knob to the desired temperature. Set the Mode knob to the **“TOAST”** position.

NOTE: selected temperature must be at least 200 F.

- Plug in the appliance and rotate the Temperature knob to the desired temperature. Set the **Mode knob** to the **“TOAST”** position.
- Open the oven door and **insert the oven rack** into the appropriate slot.
- **Close the oven door.**
- Turn the **Timer knob** to choose the desired crust setting. There are three settings available: Light, Medium, and Dark. After selecting the desired crust setting, the indicator will illuminate, and the appliance will start working.
- Once the toasting cycle is complete, the Timer knob will return to the **“OFF”** position, and the appliance and indicator will automatically turn off.

NOTE: you can stop the cycle at any time by turning the Timer knob to the **“OFF”**.

- **Remove** the oven rack using oven mitts.

CAUTION: When removing food from the oven, always use oven mitts to reduce the risk of burns

BROIL

For the **“BROIL”** function, only the upper heating element will be energized during operation. This setting is suitable for broiling the top surface of foods.

Plug in the appliance and rotate the Temperature knob to the desired temperature. Set the Mode knob to the **“BROIL”** position.

NOTE: selected temperature must be at least 200 F.

- Open the oven door and place the oven rack in a suitable slot.
- Place the food into the baking pan, and then place the baking pan on the oven rack.

- **Close the oven door.**
- Turn the **Timer knob** to select the desired cooking time. After setting the time, the indicator will illuminate, and the appliance will start working.
- Once the cooking cycle is complete, the **Timer knob** will return to the **“OFF”** position, and the appliance and indicator will automatically turn off.

NOTE: Once the cooking cycle is complete, the Timer knob will return to the **“OFF”** position.

- **Remove** the oven rack using oven mitts.

CAUTION: Be cautious as the baking pan may be very hot. Use oven mitts to handle it and avoid touching hot parts.

PIZZA

For the **“PIZZA”** function, both the upper and lower heating elements and fan will be energized during operation. This setting is applicable for baking frozen pizzas, and so on.

Plug in the appliance and then rotate the Temperature knob to the desired temperature. Dial the Mode knob to the **“PIZZA”** position.

NOTE: selected temperature must be at least 200 F.

- Place the frozen pizza on the oven rack.
- Open the oven door and insert the oven rack into the suitable rack slot.
- **Close the oven door.**
- Turn the timer to choose your desired cooking time. After setting the time, the indicator will illuminate and the appliance will start working.
- When the working cycle is finished, the Timer knob will return to the **“OFF”** position, and the appliance and indicator will automatically turn off.

NOTE: you can stop the cycle at any time by turning the Timer knob to the **“OFF”**.

- **Remove** the oven rack using oven mitts.

CAUTION: When removing food from the oven, always use oven mitts to reduce the risk of burns

WARM

For the “**WARM**” function, only the lower heating element will be energized during operation. This setting is applicable for warming food.

Plug in the appliance and then rotate the Temperature knob to the desired temperature. Dial the Mode knob to the “**WARM**” position.

NOTE: selected temperature must be at least 200 F.

- Open the oven door and place the oven rack in a suitable slot.
- Place the food into the baking pan, and then place the baking pan on the oven rack.
- **Close the oven door.**
- Turn the **Timer knob** to choose your desired warming time. After setting the time, the indicator will illuminate and the appliance will start working.
- When the working cycle is finished, the **Timer knob** will return to the “**OFF**” position, and the appliance and indicator will automatically turn off.

NOTE: When the working cycle is finished, the Timer knob will return to the “**OFF**” position, and the appliance and indicator will automatically turn off.

- **Remove** the oven rack using oven mitts.

CAUTION: Be cautious as the baking pan may be very hot.
Use oven mitts to handle it and avoid touching hot parts.

ROAST

For the “**ROAST**” function, both the upper and lower heating elements and fan will be energized during operation. This setting is applicable for roasting chops.

Plug in the appliance and then rotate the Temperature knob to the desired temperature. Dial the Mode knob to the “**ROAST**” position.

NOTE: selected temperature must be at least 200 F.

- Open the oven door and insert the oven rack into the suitable rack slot.
- Place the food into the **baking pan**, and then place the baking pan on the oven rack.

- **Close the oven door.**

- Turn the timer to choose your desired cooking time. After setting the time, the indicator will illuminate and the appliance will start working.
- When the working cycle is finished, the Timer knob will return to the “OFF” position, and the appliance and indicator will automatically turn off..

NOTE: You can stop the cycle at any time during operation by turning the Timer knob to the “OFF” position..

- **Remove** the oven rack using oven mitts.

CAUTION: Be careful! The baking pan may be very hot, so use oven mitts and avoid touching hot parts.

BAKE

For the “BAKE” function, both the upper and lower heating elements and fan will be energized during operation. This setting is applicable for baking potatoes, and so on.

Plug in the appliance and then rotate the Temperature knob to the desired temperature. Dial the Mode knob to the “BAKE” position.

NOTE: selected temperature must be at least 200 F.

- Open the oven door and insert the oven rack into the suitable rack slot.
- Place the food into the baking pan and then place **the baking pan** on the oven rack.
- **Close the oven door.**
- Turn the timer to choose your desired cooking time. After setting the time, the indicator will illuminate and the appliance will start working.
- When the working cycle is finished, the **Timer knob** will return to the “OFF” position, and the appliance and indicator will automatically turn off.

NOTE: You can stop the cycle at any time during operation by turning the Timer knob to the “OFF” position.

- **Remove** the oven rack using oven mitts.

CAUTION: Be careful! The baking pan may be very hot, so use oven mitts and avoid touching hot parts.

USEFUL TIPS

Condensation may appear on the oven door for some foods and then disappear. This is normal.

It is recommended to cook the food immediately after defrosting.

Cooking frozen foods and thick meat may require more time.

When toasting, frozen bread or multiple slices may require a darker setting compared to a single regular slice.

When baking, smoke may appear. Removing excess fat before baking can help reduce this.

CLEANING AND MAINTENANCE: Before cleaning the toaster oven, unplug it and allow it to cool completely. Wash all the attachments, including the grill rack, baking pan, and frying basket, with mild soapy water.

NOTE

Avoid using abrasive cleansers, scrubbing brushes, and chemical cleansers, as they can damage the attachments. Use a mild cloth to regularly clean the inner part of the oven. To clean the door, dampen a cloth with warm water and detergent or soap. Avoid immersing the unit in water for cleaning. After finishing cooking, if the heating elements are dirty, unplug the appliance and wait for them to cool down completely. Then, wipe the heating elements with a dry cloth. Do not use any metal pad to clean the oven's surfaces to prevent damage to the surface finish. When cleaning the crumb tray, open the oven door and simply pull out the crumb tray. Wipe the interior of the crumb tray with a damp cloth. After cleaning, push the crumb tray back into position.

CAUTION

To prevent damage to the countertop, always operate the toaster oven with the crumb tray securely closed and cleaned of excess food. Never operate your toaster oven with the oven door open. Never place the grill rack, baking pan, frying basket, or any other accessory directly on top of the lower heating elements.

SAFETY

Close supervision is necessary when any appliance is used by or near children.

Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.

After finish working, if the heating elements are dirty, you can unplug the appliance and then wipe the heating elements with a piece of dry cloth after they are cooled down completely.

ERROR CODES

E1- Broken circuit of the thermal sensor

E2-Short circuit of the thermal sensor



Environment Friendly Disposal

You can help protect the environment! Please remember to respect the local regulations. Take non-working electrical equipment to an appropriate waste disposal center.

1 YEAR LIMITED WARRANTY

Customer Service:

(877) 246-0990

ApplianceSupport@monchateau.us

Sur la table
KITCHEN ESSENTIALS

AIR FRYER TOASTER OVEN

23 QT 0.78 CU FT

Customer Service:

(877) 246-0990

ApplianceSupport@monchateau.us

MODEL: SE-1821