

Sur la table
KITCHEN ESSENTIALS

AIR FRYER TOASTER OVEN

23 QT 0.78 CU FT

QUICK START GUIDE



www.mcappliances.us

MODEL SE-1821

BEFORE THE FIRST USE:

During the initial start-up operation, you may experience a minimal smell and smoke for approximately 15 minutes. This is normal and caused by the protective substance on the heating elements, which safeguards them during shipping from the factory. It is recommended to operate the oven without any food for about 15 minutes during the first use. Also, ensure proper ventilation in the room.

WHAT 'S IN THE BOX

1 Oven



 
2 Crumb Tray



3 Baking Tray



5 Air Fryer Basket




4 Oven Rack



TRAYS OR BASKET POSITION SLOTS



CONTROL PANEL

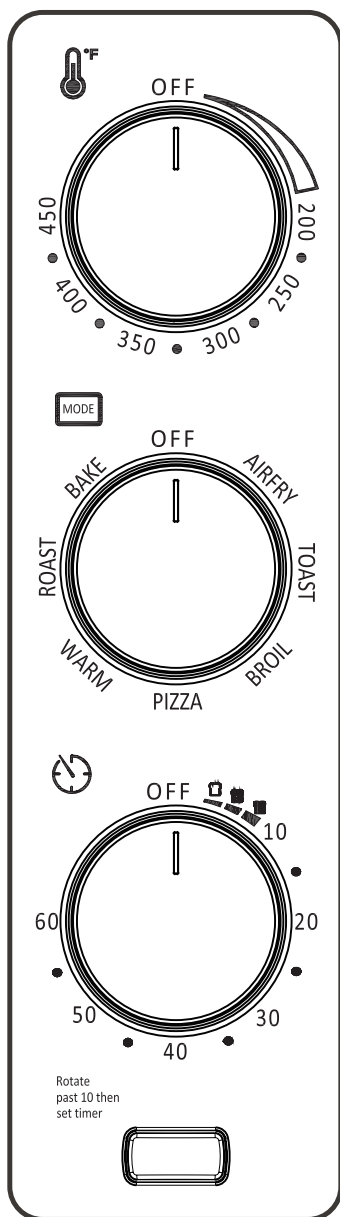

- **AIRFRY:** Both the upper and lower heating elements, as well as the fan, will be in operation.
- **TOAST:** Both the upper and lower heating elements will be on during operation.
- **BROIL:** Only the upper heating element will be on during operation.
- **PIZZA:** Both the upper and lower heating elements, as well as the fan, will be on during operation.
- **WARM:** Only the lower heating element will be on during operation.
- **ROAST:** Both the upper and lower heating elements, as well as the fan, will be on during operation.
- **BAKE:** Both the upper and lower heating elements, as well as the fan, will be on during operation.
- **TIMER CONTROL:** Turn the timer knob clockwise to the desired time in order to start the cooking process. When setting the Timer for less than 10 minutes, always rotate the knob past the 10 minute mark then back to your desired time.*

*Turn the Timer Control to OFF to turn the Air Fryer Toaster Oven OFF.

Sur la table
KITCHEN ESSENTIALS

**AIR FRYER
TOASTER OVEN**

23 QT 0.78 CU FT

Customer Service:

(877) 246-0990

ApplianceSupport@monchateau.us

MODEL: SE-1821