

BEFORE USING FOR THE FIRST TIME

Remove all packing material and labels from the inside and outside of the Air Fryer. Check that there is no packaging underneath and around each of the fryer baskets and crisper trays.


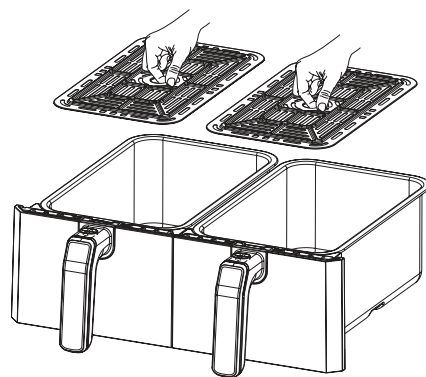


Figure 1

- Your Dual Basket Air Fryer is shipped with the 2 crisper trays locked into each fryer basket inside the Air Fryer body.
- Firmly grasp each fryer basket handle, to pull fryer baskets out of the main body.
- Grasp each crisper tray handle and lift to remove from each basket. (Figure 1)
- Wash both fryer baskets and crisper trays in hot, soapy water.
- DO NOT IMMERSE THE AIR FRYER BODY IN WATER. Wipe Air Fryer body with a damp cloth. Dry all parts thoroughly.
- Replace crisper trays into each fryer basket. With the handle facing up, insert each tray so that the rubber corners fit and lock comfortably into each basket.
- Due to base unit's gracious front curve, the air fryer baskets must be inserted into the proper sides. The tops of the drawers are labeled L (LEFT) and R (RIGHT). Slide the LEFT air fryer basket/crisper tray into the left side of the Air Fryer body. Slide the RIGHT air fryer basket/crisper tray into the right side of the body. Before use make sure each basket is fully inserted and locked into place. (Figure 1)

Note: During first use, the Dual Air Fryer may emit a slight odor. This is normal and will not affect flavor.

DUAL TOUCHSCREEN CONTROL

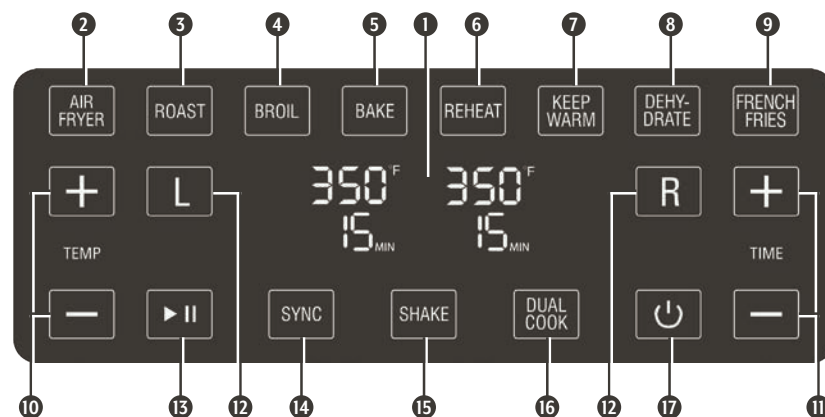

- | | | |
|--------------------------------------|---------------------------------|----------------|
| 1 Dual Digital TIME/
TEMP Display | 7 Keep Warm | 13 Start/Pause |
| 2 AIR FRYER Air Fryer | 8 Dehydrate | 14 Sync Finish |
| 3 ROAST Roast | 9 French Fries | 15 Shake Food |
| 4 Broil | 10 Temp | 16 Dual Cook |
| 5 Bake | 11 Time | 17 On/Off |
| 6 Reheat | 12 Left/Right Basket
Control | |

10 Temp (+ or -) / 11 Time (+ or -)

- Press **+** or **-** on the left side of the control panel to increase or reduce TEMP in 5 degree increments.
- Press **+** or **-** on the right side of the control panel to increase or decrease TIME in 1 minute increments.

NOTE: When using DEHYDRATE, TIME will increase or decrease in 1 hour increments.

NOTE: LEFT or RIGHT basket TIME and/or TEMP may be programmed independently, at any time before or during operation. Press the LEFT or RIGHT button. When LEFT or RIGHT begins to flash, programming can be adjusted.

12 Left/Right Basket Control (L or R)

- When the pulsing **⏻** is pressed, a tone will sound, you can select to use the left or right basket independently, or dual cook to use both at the same time.
- Press the **L** or **R** button to program the Left or Right basket. While Left or Right flashes, press any MENU button to continue.

NOTE: LEFT or RIGHT baskets may be programmed independently, at any time before or during operation.

Sur la table

DUAL BASKET AIR FRYER

8 QUART / 7.57 LITER

QUICK START GUIDE

8 MENU SELECTIONS CHART FOR PRE-PROGRAMMED COOKING

MENU	DEFAULT TEMP	DEFAULT TIME	TEMP RANGE (°F)	TIME RANGE	SHAKE FOOD
Air Fryer	400°F	20 mins	170~450	1-60 mins	2/3 time/ 1x
Roast	400°F	35 mins	350~450	1-60 mins	2/3 time/ 1x
Broil	450°F	10 mins	450	1-30 mins	Not recommended
Bake	350°F	16 mins	170~400	1-60 mins	2/3 time/ 1x
Reheat	250°F	6 mins	170~400	1-60 mins	Not recommended
Keep Warm	170°F	60 mins	150~200	1-60 mins	Not recommended
French Fries	400°F	18 mins	170~400	1-60 mins	2/3 time/ 1x
Dehydrate	130°F	8 hours	90~170	1 hr-24 hrs	Not recommended



Scan here for bonus recipes and to watch how-to videos that will help you make the most of your air fryer.

or go to www.monchateau.us/sltappliances

LET'S START COOKING







1. Plug cord in the wall outlet. An audible tone will sound, the control panel will illuminate. The  button will light up red.
2. When the  is pressed, a tone will sound and the power button will turn green, the control panel will illuminate LEFT, RIGHT and  (Figure 2).
3. Select , , or . Press the desired MENU button. A tone will sound. The LEFT or RIGHT basket control and both the default TEMP (in large numerals) and default TIME (smaller numerals) will flash on the display and alternate between time and temperature. (Figure 3)



Figure 2



Figure 3

SINGLE BASKET MANUAL OPERATION












1. For single basket cooking, press  to START the cooking process. (Figure 4)
2. For dual basket cooking, press the other basket control. (Figure 5) MENU selections will appear.
3. Press the desired MENU button for RIGHT basket cooking.
4. Press  to START the cooking process.
5. When the selected LEFT basket control begins to flash, press any MENU button to continue. (Figure 3)
6. When both the TEMP and TIME light up, press TEMP  or  to increase or reduce TEMP in 5 degree increments.
Note: Press and hold the TEMP button to fast advance.
7. Press TIME  or  to increase or decrease TIME in 1 minute increments.
Note: Press and hold the TIME button to fast advance.
Note: In the dehydrate setting, time is adjusted in 1 hour increments.



Figure 4

8. When the desired TIME and TEMP appear on the digital display, press  to turn the Dual Basket Air Fryer ON. The target TIME will begin to count down. TEMP and remaining TIME will appear on the digital display. (Figure 4)
Note: To pause air frying immediately, push the basket release button and pull the active fryer basket out of the body at any time. When the basket is replaced, cooking will resume.
Note: Press  to PAUSE the cooking process at any time. When  is pressed again, cooking will resume.
9. When the remaining Time reaches 00:00, the display will show a countdown of 20 seconds and the machine will beep 5 times and turn off when it is safe to remove food.
Note: The quantity, density, weight of food will alter the total cooking time necessary. Remember, frying smaller batches will result in shorter cooking times and higher food quality.
IMPORTANT: Always check food halfway through cooking time to determine final cook TIME and TEMP.
10. To adjust the air frying TEMP or TIME during operation, use the TEMP or TIME  or  to increase or decrease TEMP or TIME as you cook.

DUAL BASKET MANUAL OPERATION


1. Program the Air Fryer LEFT basket following Single Basket: Manual Operation Steps 5 through 10.
2. Press the RIGHT basket control (Figure 6). The menu will appear.
3. Press the desired MENU button for RIGHT basket cooking. Adjust TEMP or TIME as needed. A tone will sound to confirm your selection.
4. Press  to begin operation. (Figure 7)



Figure 5



Figure 6

Sync Finish



1. Program the Dual Air Fryer LEFT and RIGHT baskets following Dual Basket: Manual Operation Steps 1 through 3.
IMPORTANT: Both LEFT and RIGHT baskets must first be programmed.
2. Press  to ensure both baskets will complete cooking together. Then press  to begin operation.
3. Cooking time will appear on L and R sides and the countdown will begin on the side with more time. When the remaining time on L and R sides is even, the countdown will proceed on both sides.
NOTE: Once cooking has started, SYNC function will not be operable.





Figure 7



Figure 8

Dual Cook

1. Press . Settings for both Air Fryer baskets will be automatically duplicated. (Figure 9)
2. Press  to begin operation.

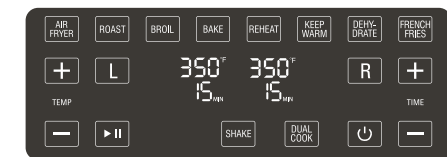


Figure 9

CAUTION: RISK OF FIRE!
other hot liquids

CAUTION: RISK OF BURNS!
Hot surfaces with bare hands.
Wear oven mitts during use.